


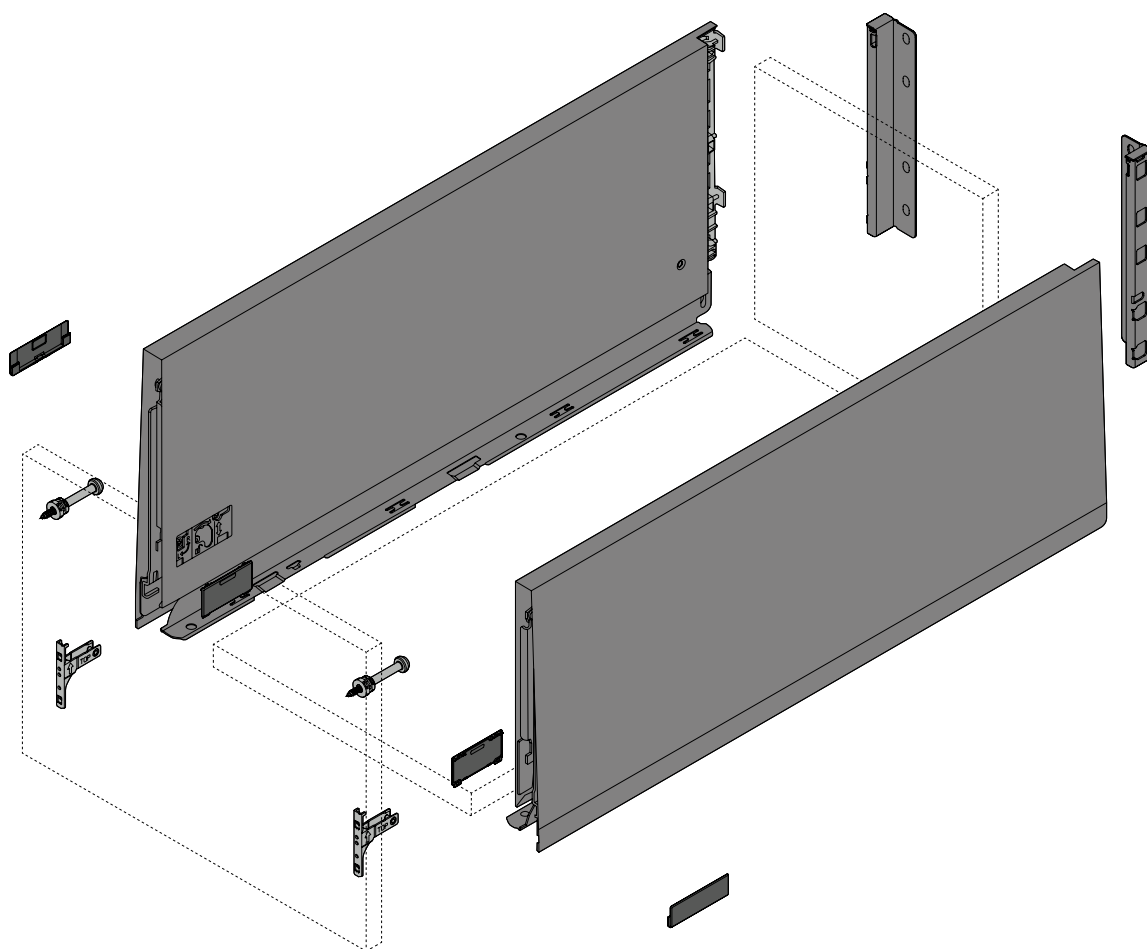

BLUMOTION

by Blum

阻尼

SERVO-DRIVE

by Blum

电动碰碰开

**TIP-ON
BLUMOTION**

by Blum

阻尼碰碰开



Installation video
安装视频



EA app
百隆安装宝 App




All measurements are in millimetres 所有尺寸以毫米为单位 (mm)


FO Front overlay 前板重叠部分

ICW Inner carcass width 橱内宽度

Cutting dimensions 切板的尺寸

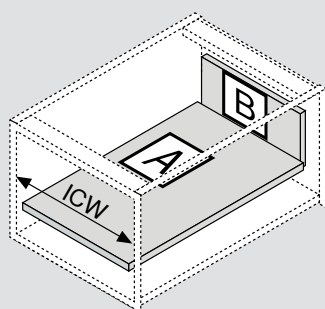


Back panel 后背板

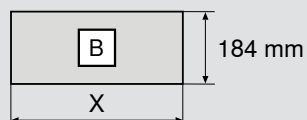

$X = \text{Inner carcass width} - 51 \text{ mm}$
橱内宽度 减 51 mm

Base panel 底板

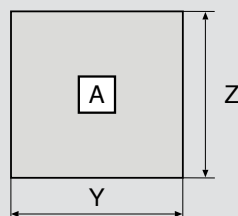


$Y = \text{Inner carcass width} - 51 \text{ mm}$
橱内宽度 减 51 mm

$Z = \text{Runners length} - L^* \text{ mm}$
导轨长度 减 L^* mm


* $L = 25 \text{ mm}$ (for 15 mm thick back panel)
 $L = 26 \text{ mm}$ (for 16 mm thick back panel)

Space requirements in carcass 橱内空间需求

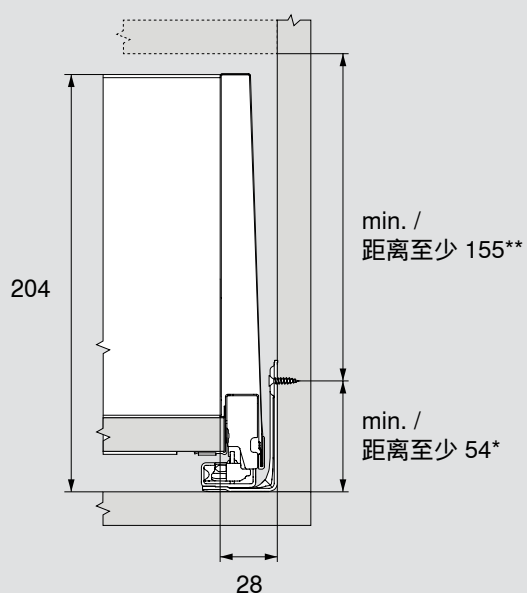


*	+1 mm if runner is installed before the cabinet is assembled 如果导轨安装在橱身装置之前必须 加 1 mm
**	Include 2 mm tilt adjustment 包括 2 mm 倾斜调节

Installation of back panel 后背板安装尺寸

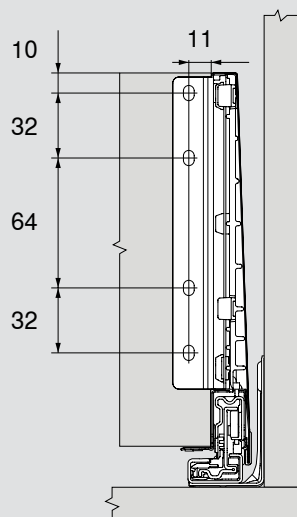


Installation of front panel 前板安装尺寸

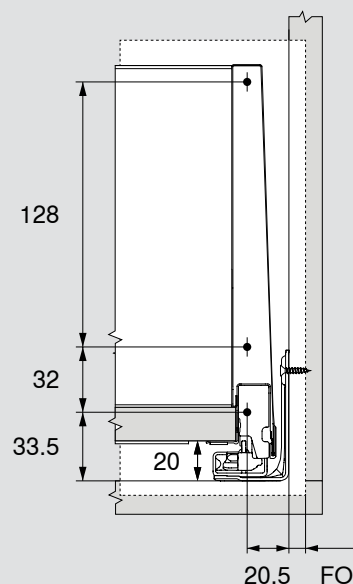

Runner installation position 铁路螺丝洞的正确位置

40 kg


450 - 500

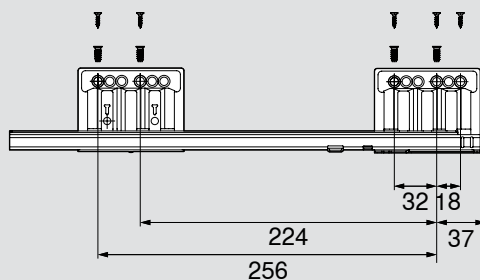

Chipboard screw 木工螺丝
System screw 系统螺丝

70 kg


450 - 500

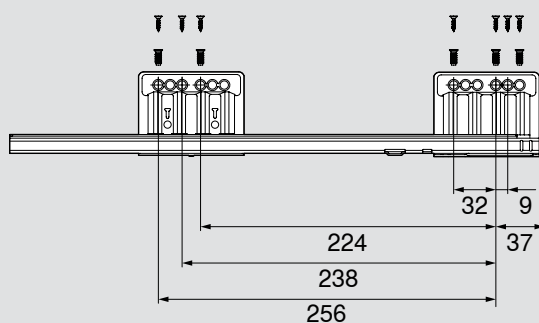


Chipboard screw 木工螺丝
System screw 系统螺丝

Drawer front panel 抽屉前板


1  (3.5 x 15)  (3.5 x 15)

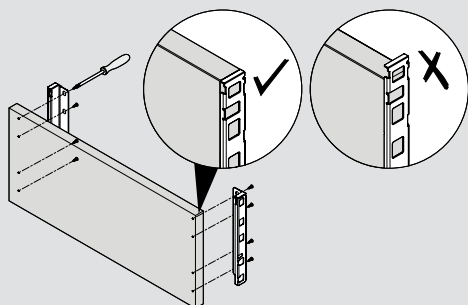

2

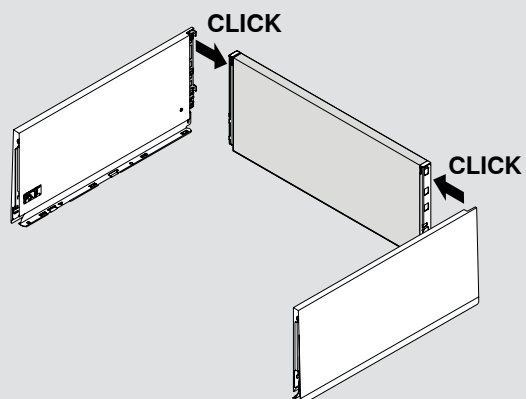


3

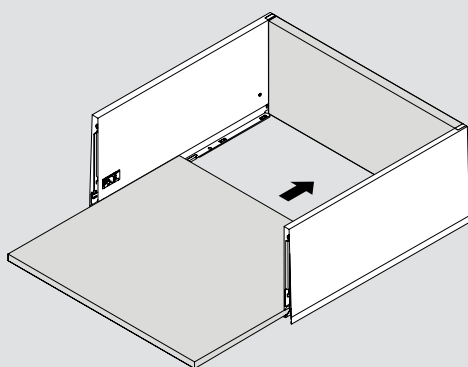


4


 (3.5 x 15)  (3.5 x 15)

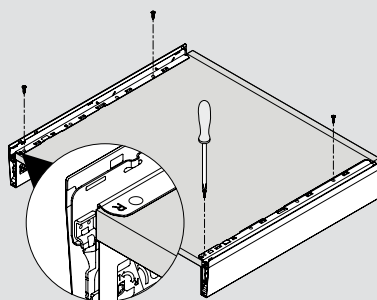


5

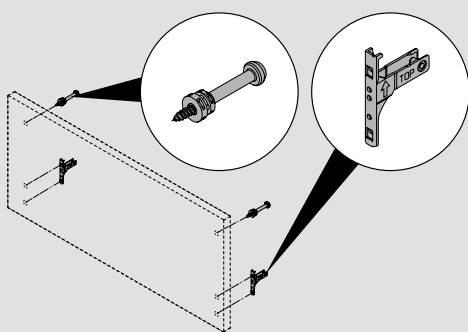

6

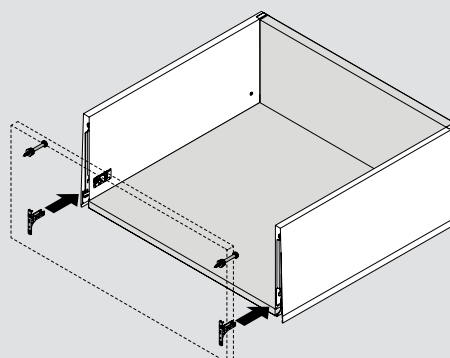


7

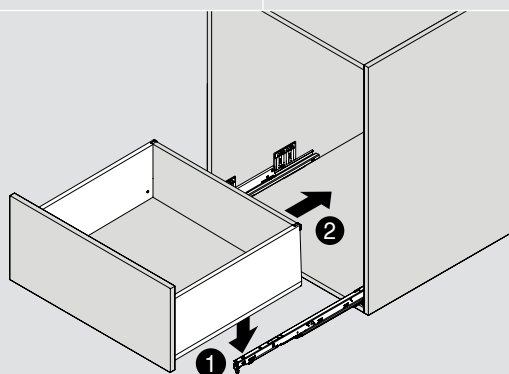


Drawer front panel removal 抽屉前板拆卸

1

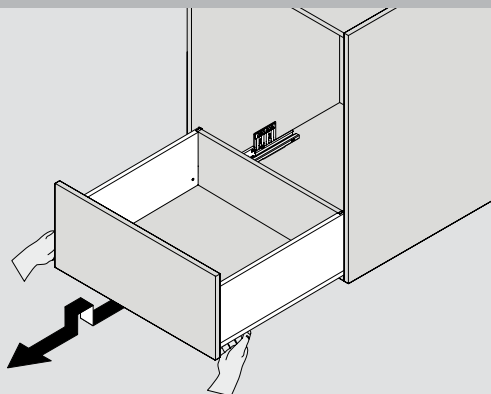


2

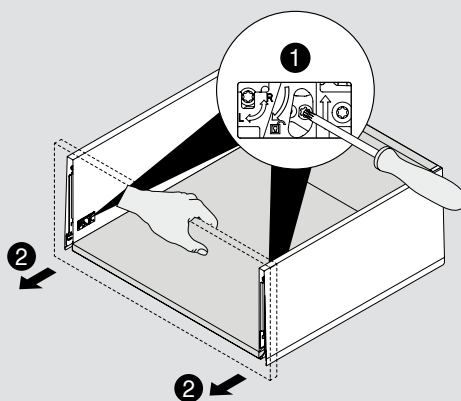

Drawer front panel adjustment 抽屉前板调节


1

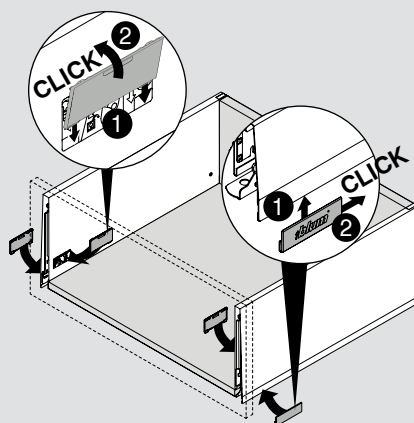


2



Adjustments require Torx 20
调节必需采用 Torx 20 六角星形螺丝刀

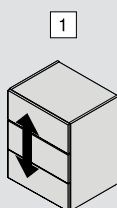

± 2

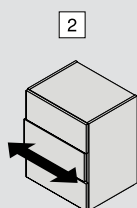

± 1.5

